



Maybach Style Kids Ride on Car Installation and Operation Instructions



Please read this instruction manual carefully. It is important to read and follow all of the steps during assembly to ensure proper operation and safety of the child. Please keep this manual for future reference.



**Scan this QR
Code to view our
assembly video**













SPECIFICATIONS:

Car Type:	Maybach Style
Battery Type:	12V7AH
Electric Motor:	12V30W(Drive)
Age Range:	2 – 5 Years
Max. Weight:	65 lbs
Product Size:	54”L x 29”W x 29”H
Avg. Speed:	2 – 3 MPH
Charging time:	8-12 hrs
Avg. Use Time:	1-2 Hrs (depending on use)
Remote Battery:	2 - AA (not included)

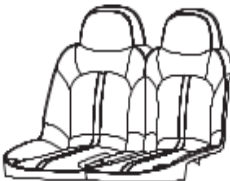IMPORTANT!

<ul style="list-style-type: none"> • Assembly of car and charging of battery is only to be done by an adult. ⚠ 	<ul style="list-style-type: none"> • WARNING!! NOT TO BE USED ON STREETS or IN TRAFFIC.
<ul style="list-style-type: none"> • Never modify the electric circuit system or tamper with electric system. Can cause permanent damage. 	<ul style="list-style-type: none"> • Please check the product regularly for any loose parts or wires to ensure proper operation.
<ul style="list-style-type: none"> • Adult supervision is recommended during operation by child to avoid injury. Safety equipment is recommended. 	<ul style="list-style-type: none"> • Please make sure that the child uses caution to avoid falls and collisions causing injury to the child or third party.
<ul style="list-style-type: none"> • Do not pick up vehicle by steering wheel. 	<ul style="list-style-type: none"> • Do not pick up battery by wires or charger.
<ul style="list-style-type: none"> • Keep all plastic bags out of the reach of young children. 	<ul style="list-style-type: none"> • Not recommended for children under the age of 2 yrs. due to small parts that could cause a choking hazard.
<ul style="list-style-type: none"> • Battery must be charged for a minimum of 8-12 hours prior to first use of the car to avoid damage to the battery. Car power switch must be in off position when charging. 	<ul style="list-style-type: none"> • Battery charger should be examined for damage prior to each use. It is important to inspect the cord and both ends for damage. In the event, there is damage found, DO NOT USE THE CHARGER! Contact us for replacement charger.
<ul style="list-style-type: none"> • Please retain instruction manual for future reference. 	<ul style="list-style-type: none"> • Please retain packaging in the event it is necessary to return for repair.
<p>If the charger is plugged into the charging port, the car will not power up regardless if the charger is plugged into the wall outlet or not.</p>	

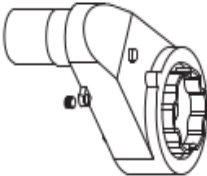Please identify all parts before assembly and save all packaging materials until assembly is complete.


		
1 Main Body	2 Charger	3 Rearview Mirror
		
4 Steering Wheel	5 Seat	6 Wheel-4
		
7 Wheel Cup-4	8 Guide Book	9 Remote Control
		
10 Motor	11 Accessory Package	12 Rear Axle

[All assembly videos can be found on YouTube under SPORTrax](#)

Parts Diagram

Assembly must be done by adults, it almost takes 20 minutes.

Notice: Some parts should be assembled on both sides.

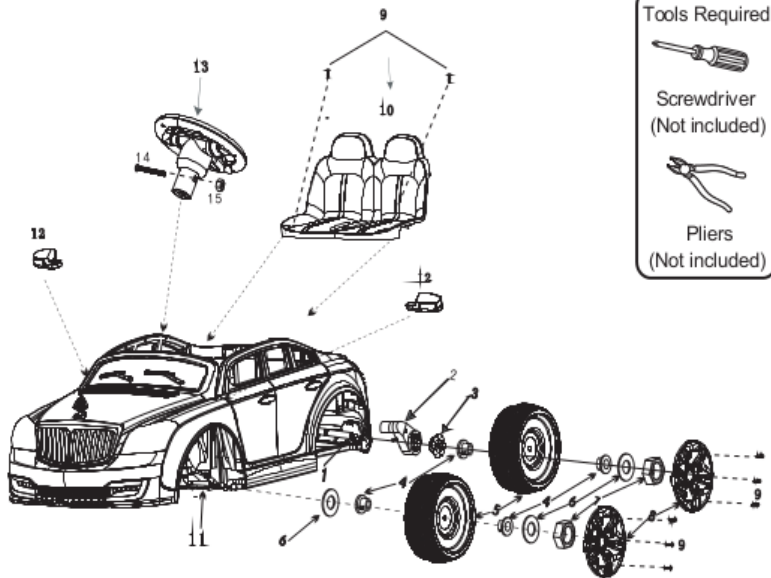

Tools Required



Screwdriver
(Not included)




Pliers
(Not included)


1	Rear Axle	11	Front Axle
2	Motor	12	Rearview Mirror
3	Driving Connection	13	Steering Wheel
4	ϕ 12 Bushing	14	M5*3.5 Machine Screw
5	Wheel	15	M5 Screw
6	Washer	16	
7	M10 Screw	17	
8	Hubcap	18	
9	ϕ 4 * 1.2 Round Head Self-tapping Screw	19	
10	Seat	20	

ASSEMBLY INSTRUCTIONS:


1. **Remove car from box and plastic.** Lay out all parts to be assembled. Unplug and remove both motor/gearboxes from the battery area. Turn car upside down so that the bottom of the car is facing up.

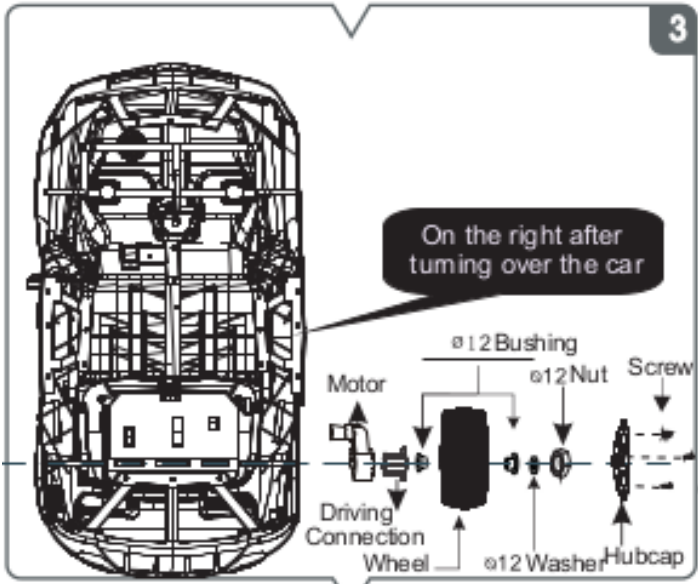


2. **Install rear wheels & motor/gearbox on rear axle:** Right side - Slide motor/gearbox onto the rear axle while feeding the electrical connection through the hole in the body into the battery area and reconnect the electrical connection to the white connector with right side wires. Slide a previously assembled wheel onto the axle. Slide washer on and secure the assembly with nut that is provided. Install wheel covers onto the wheels by lining up the 5 tabs on the covers with the holes on the tires. Snap them in gently until cover is securely on tire. **Repeat steps for left side. Electrical connection will be made to the white connector with left side wires.** See Fig. 3.

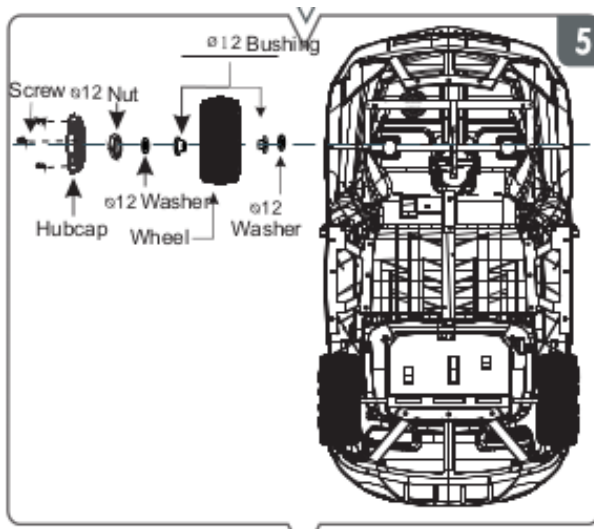


- Install the Front Wheels:** Slide a washer and then a black bushing onto the front axle. Slide the wheel onto the front axle. Slide another washer and then the nut onto the axle and secure assembly. Use the wheel nut wrenches to tighten down both sides. Do not overtighten tires because this could cause premature motor failure. Install wheel covers onto the wheels by lining up the 5 small tabs in the wheel covers with the corresponding holes in the wheels and gently snap into place. **Repeat steps for other side.** See Fig. 5.

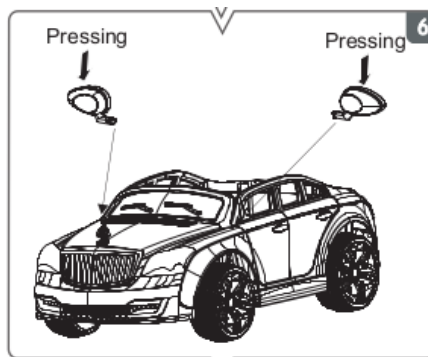


- Install exterior mirrors:** Place mirrors into place on the body press firmly until a clicking sound is heard. (Letting you know they have snapped into place.) See Fig. 6

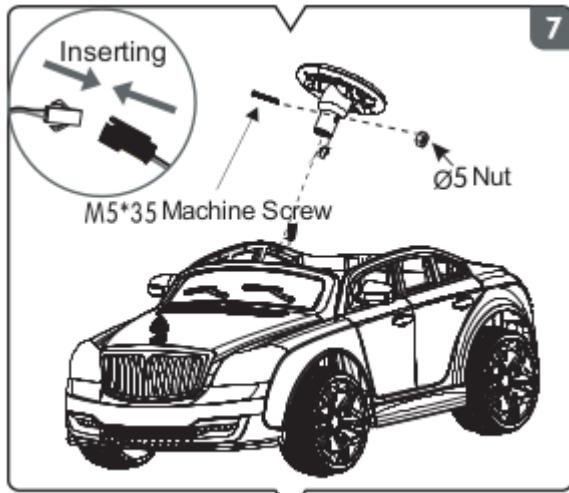


5. **Install Steering Wheel:** Connect electrical connection between the steering wheel and the wires from the car. Slide steering wheel onto the steering shaft. Align the screw hole in the steering shaft and the steering wheel and slide the bolt through the hole. Apply the nut to the end of the bolt and tighten until snug. See Fig. 7

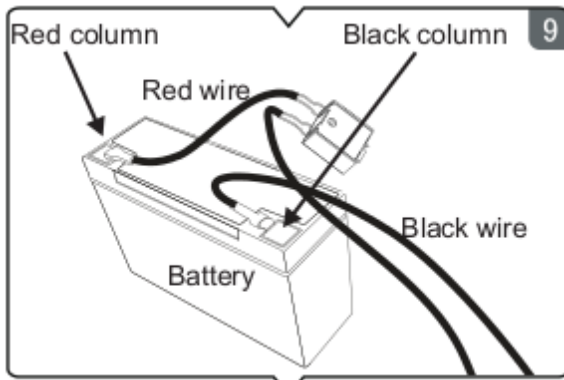

6. **Connecting the Battery:** Slide red wire with spade terminal onto the red or positive side of the battery. Slide the black wire with spade terminal onto the black or negative side of the battery. **DO NOT INSERT THE RED WIRE ONTO THE BLACK OR NEGATIVE SIDE OF THE BATTERY!** See Fig. 9

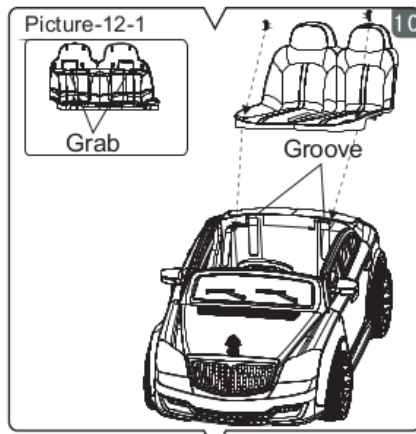

7. **Install the Seat:** Slip tabs on back of seat into the slots in the body of the car. Attach seat to body through the two holes located in the front corners of the seat with 2 screws.
See Fig. 10

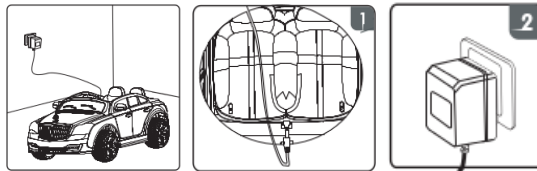


Charging the battery: The charging port is located just under the front portion of the seat. Plug the charger into the charging port first, then plug the charger into wall outlet.


Please Note: As a safety precaution and to avoid damage to the charger, the car will not power up while charger port is plugged into the car. **BATTERY MUST BE CHARGED FOR A MINIMUM OF 12 HOURS BEFORE INITIAL USE TO AVOID DAMAGE TO THE BATTERY.**

CHARGING and BATTERY MAINTENANCE:

- **IMPORTANT!** Battery must be charged for a minimum of 12 hours prior to first use of the car to avoid damage to the battery.
- When connecting the charger, please install the plug into the car prior to plugging charger into the wall socket.
- Charging time for battery is 8-12 hours
- **DO NOT EXCEED 20 hours** when charging.
- Only use the battery supplied with this car to avoid damage to the car.
- Adult supervision is advised for connecting charger.
- Never reverse polarity of the battery + to red and – to black.
- Never short circuit battery! Do not touch red wires to black wires.
- For remote control: it is not recommended to use rechargeable batteries.

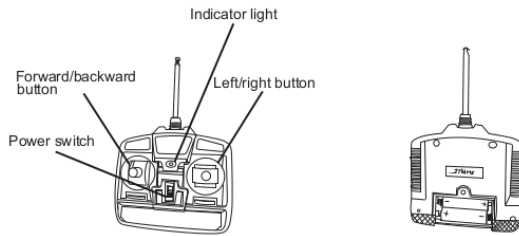

REMOTE CONTROL BATTERY INSTALLATION: Open battery cover on the back of the remote control. Install 2 AA Batteries as indicated inside the cover. Replace battery cover and secure with screw.

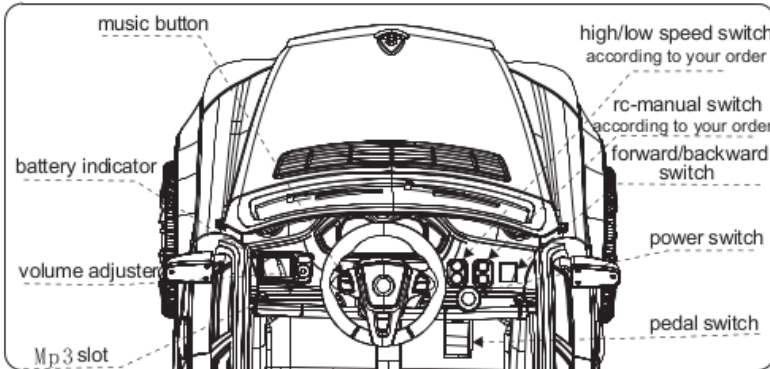

Once battery is fully charged, disconnect from charger. Depress power button to turn on the car. Once power is on, all lights light up, accompanied by the sound of the engine. (If no sound is heard, turn up the volume) To allow the child to operate the car, remote control/manual switch must be set to the manual position. To move the car forward, forward/reverse switch must be set to the “forward” position and to move the car backward, the switch must be set to the “reverse” position. To operate the car using the remote control, remote control/manual switch must be set to the “remote control” position.

The buttons found on the steering wheel are for the horn and the on-board music. There is a MP3 interface located on the dash area with a volume knob to control the level of sound.

[All assembly videos can be found on YouTube under SPORTrax](#)

TROUBLE SHOOTING GUIDE:

Problem	Possible Cause	Possible Solutions
Car will not move	<ol style="list-style-type: none"> 1. Battery voltage is low. 2. Battery connector or wires are loose. 3. Battery is damaged or dead. 4. Electrical box or motor is damaged 	Charge the battery Re-connect the battery connector to the car Replace battery Replace motor
The battery will not charge.	<ol style="list-style-type: none"> 1. Battery connector may have come apart or have a bad connection. 2. Battery charger plugged into a bad wall outlet. 3. Battery charger is damaged. 	Re-connect the battery connector to the car electrical connector Try another wall outlet Replace battery charger
Shortened battery life	Battery was not charged fully Battery is old	Charge battery fully Change battery
Some Noise and heat when charging battery	Chemical reaction	Normal
Low Speed	Battery is old Battery is low on charge Weight limit exceeded Uneven or uphill path Vehicle is being used in harsh conditions	Change the battery Charge the battery Do not exceed max weight limit Use on flat surfaces Avoid using car in harsh conditions
Noise coming from motor/gearbox	Gear in motor/gearbox broken	Call for replacement motor
The car shakes when moving	Bad Connection of the motor wires Possible motor failure	Reconnect wires Call for replacement motor
Car needs a push to go forward	Poor contact of wires and/or connectors "Dead Spot" on motor	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact the distributor's service department A dead spot means the electric power is not being delivered to the terminal connection. Call our service department

Self-Resetting Breaker – The vehicle is equipped with a self-resetting breaker. In the event the power is tripped the breaker will reset itself in approximately one minute.

If you are unable to solve a problem, please feel free to contact us.

Phone: 402-477-0541 or Email: customerservice@rollinghillstrading.com

GENERAL MAINTENANCE:

It is the parent's responsibility to check main parts of the toy before using. Regularly examine the car for potential hazard, such as damage to the battery, charger, cable or cord, and plug. Also, check that all screws are tightened throughout the car. In the event of such damage, the toy must not be used until that damage is repaired or replaced.

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult should handle the battery. Recharge the battery at least once a month when not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather as water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- For extended times when the car will not be used, the power switch needs to be in the off position and the electrical connections should be disconnected from the battery.

WARNING:

- Use only the rechargeable battery and charger supplied with your vehicle. **NEVER** substitute the battery or charger with another brand. Using another battery or charger may cause damage.
 - **NEVER** modify the electric circuit system. Tampering with the electric system may cause permanent damage to the system.
 - **Do not** allow direct contact between battery terminals.
 - **Do not** allow any type of liquid on the battery or its components.
 - Charge the battery in a well-ventilated area **ONLY**. Do not charge near or around flammable materials.
 - **NEVER** pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case **ONLY**.
 - Charge the battery in a dry area **ONLY**.
- Wash hands after handling.**
- **Do not** open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
 - **Do not** open the charger. Exposed wiring and circuitry inside case could cause electric shock. **NEVER** allow a child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
 - **Do not** drop the battery. Permanent damage to the battery could occur or cause serious injury.
 - Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. **DO NOT** charge the battery if any damage to parts has occurred.
 - **Do not** allow the battery to drain completely. Recharge the battery after each use or once per month if not used regularly.
 - **Do not** charge the battery upside down.
 - **Always** secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
 - The **Power Switch** must be turned in the **OFF** position when charging.
 - When the car begins to run slowly, recharge the battery.